



NiCE

AutoSupportメッセージ : SHELF_FAULT

https://kb-jp.netapp.com/on-prem/ontap/OHW/OHW-KBs/AutoSupport_Message__SHELF_FAULT

Updated: Fri, 23 Oct 2026 10:16:33 GMT

環境

- ONTAP 9
- clustered Data ONTAP 8
- Data ONTAP 7 以前
- シェルフシャーシ

問題

シェルフ障害 SHLFLT: System Notification from Filer1 (SHELF_FAULT) WARNING

AutoSupport PWRFLT: System Notification from Filer1 (SHELF_FAULT) WARNING

[Filer1: ses.status.temperatureWarning:warning]: DS14-Mk2-AT shelf 1 on channel 2a temperature warning for Temperature sensor 2: not installed or failed.

Current temperature: <n/a> C (<n/a> F). This module is on the rear side of the shelf, at the top center, on shelf module A.

[Filer1: monitor.shelf.fault:CRITICAL]: Fault reported on disk storage shelf attached to channel 2a. Please check fans, power, and temperature.

[monitor.globalStatus.critical:CRITICAL]: Disk shelf fault

[Filer1: dsa_worker3: ses.status.temperatureWarning:alert]: DS2246 (S/N XXXXXXXXXXXXXXX) shelf 5 on channel 0c temperature warning for Temperature sensor 6: non-critical status; overtemperature warning. Current temperature: 66 C (150 F). This module is on the rear of the shelf on the lower right power supply.